


NAC-7001CP/NAC-7002CP/NAC-7003CP Access Control Panel User Manual



www.nordencommunication.com



Connection Diagram

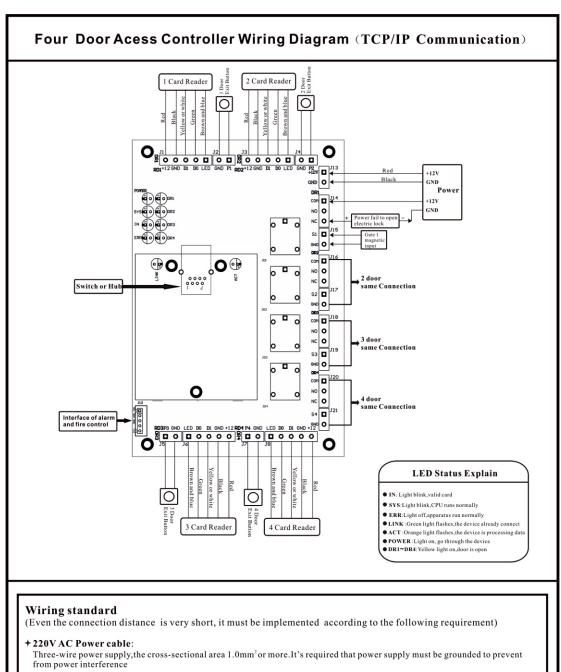

+ The line of electric lock to controller:


It's recomended to use two-wire power line, the cross-sectional area 1.0mm² or more. If the distance over 50 meters, it's considered to use thicker line or multiple paraller

+TCP/IP Communication Line:


The card reader, door sensor and button line:

Can use network cable or others



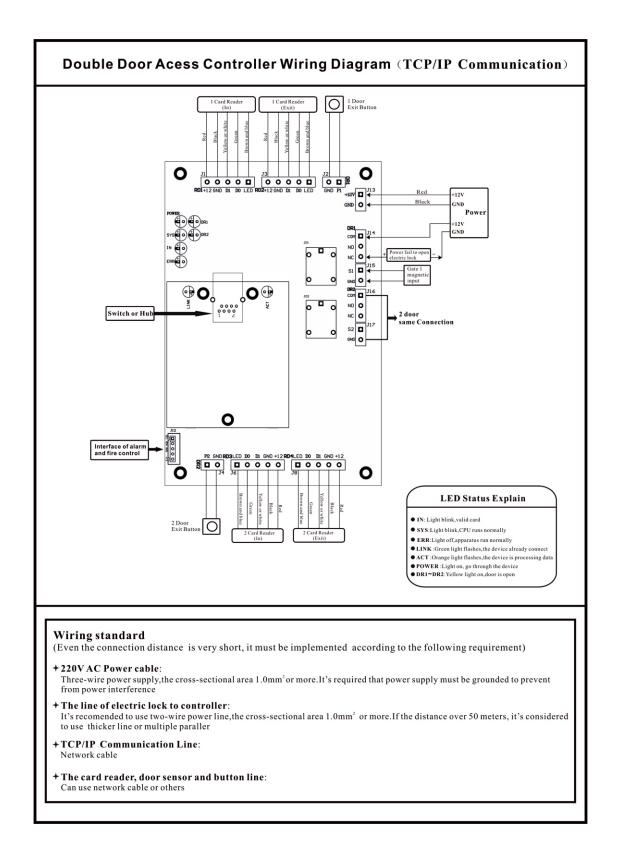



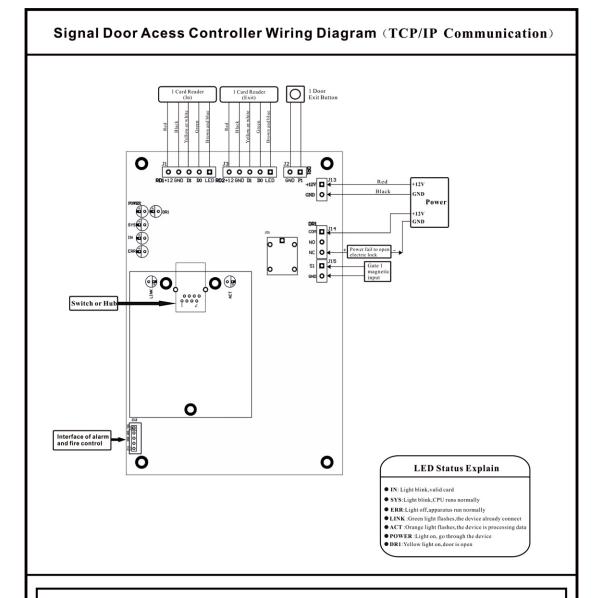

Wiring standard

(Even the connection distance is very short, it must be implemented according to the following requirement)

Three-wire power supply, the cross-sectional area 1.0mm² or more. It's required that power supply must be grounded to prevent from power interference

+ The line of electric lock to controller:

It's recomended to use two-wire power line, the cross-sectional area 1.0mm² or more. If the distance over 50 meters, it's considered to use thicker line or multiple paraller

+TCP/IP Communication Line: Network cable

+ The card reader, door sensor and button line: Can use network cable or others



Part 1 Basic Operation of Software

1.1 Login



Double Click the

icon to start the software and it will open the


Login windows as follows:



The default username is "abc", the password is "123".

It is recommended to change the username and password at the first use.


If the SQL Server connection fail. There will appear a dialog box as follows:

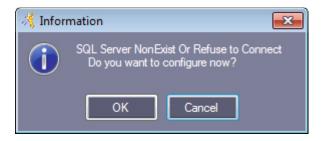

Click "OK', Please consult the Appendix 5.2 SQL Server Configuration.

After login, it will show the main windows. as follows:



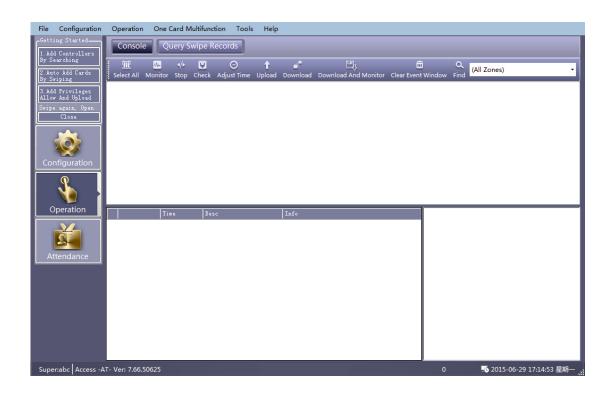

1.2 Parameter Settings of Equipment


1.2.1 Add/Set up Controller





click the New to add the controllers into system.



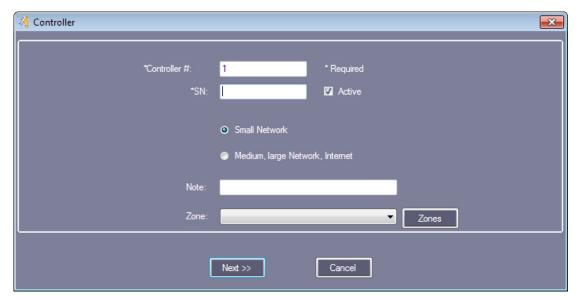


*Controller # (namely each controller serial number) may check on the label S/N:******** of the controller . please fills that nine numerals.

Attention: If the controller S/N which you written is not same as the label S/N:******* the software cannot communicate with the controller.

Small Network: Support TCP/IP communication, all controllers are in the same network segment

Medium, large Network, or Internet: Support TCP/IP communication for different network segment controllers.

Click "Next"

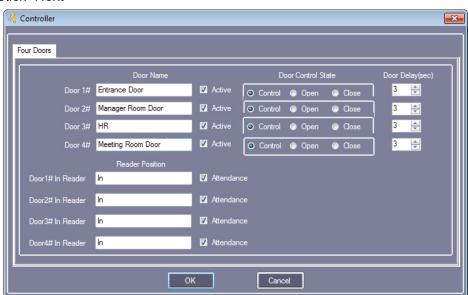

"Door Name" and "Reader Position" can be modified

Mark "Active": by

the console will display the door; otherwise, it won't display.




Mark ✓ on the attendance box to use the details on the card reader for attendance records; otherwise, the attendance will not be saved.

Click "OK"



1.2.2


Click [Configuration] > [Controllers] > [Search].

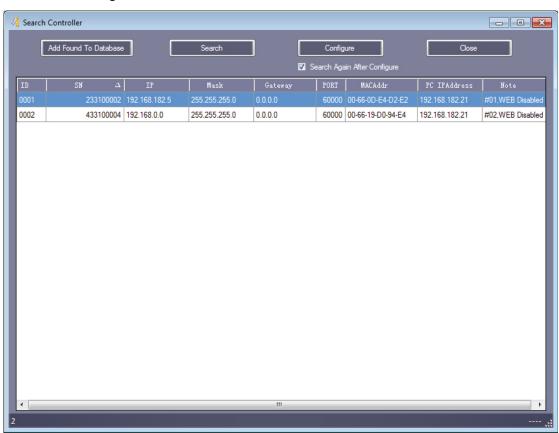

Search need take around 5 Seconds.


Click "Configure"



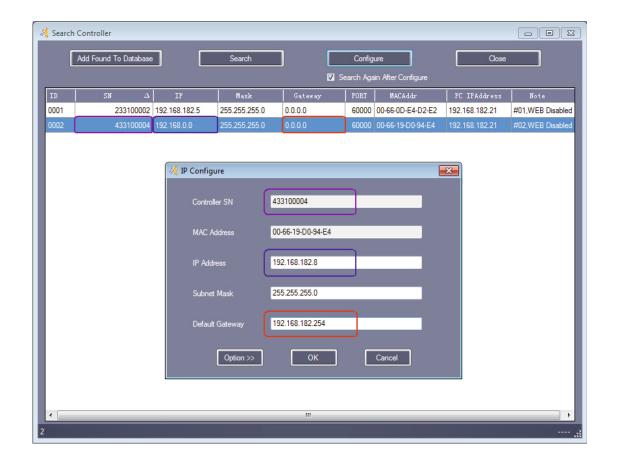


Click "OK"




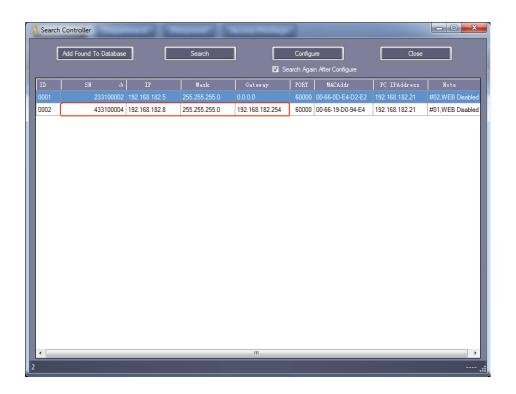

After IP address setting, you can move to chapter 2.2.1 Add/Set up Controller to set the controller parameters, the IP address should be assigned to the corresponding Controller.

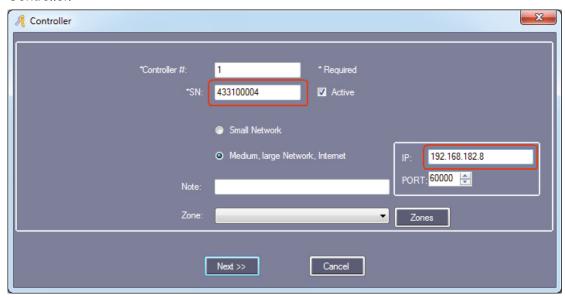

You can see IP address as shown in the picture.

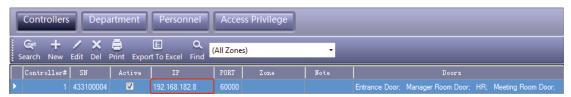





If the controllers are separated into different network, each controller must be assigned a unique IP address.

1.2.3 Controller Zone Management

Click [Configuration] > [Zones]

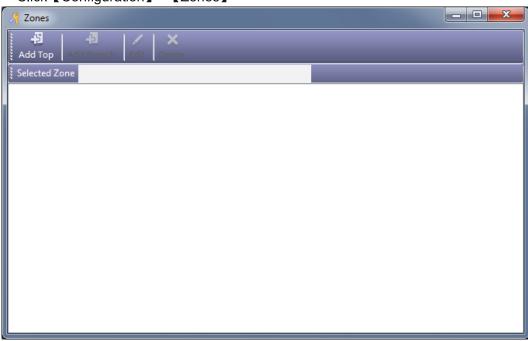


Click "Add Top"

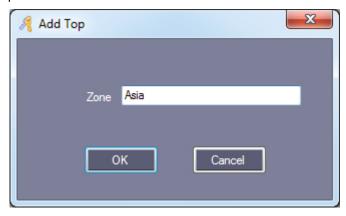


Click "OK"



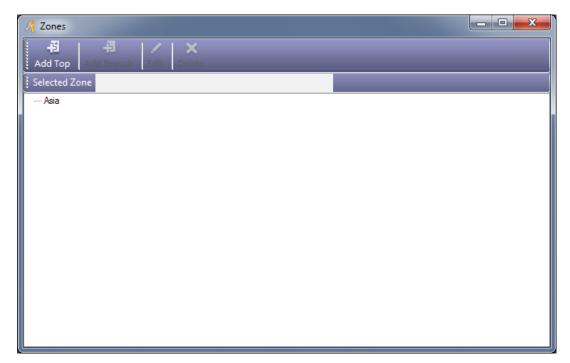


Click the "Add Branch" to add a new Branch under the Top.

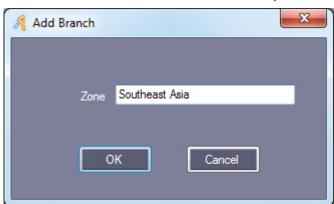


Click "OK"



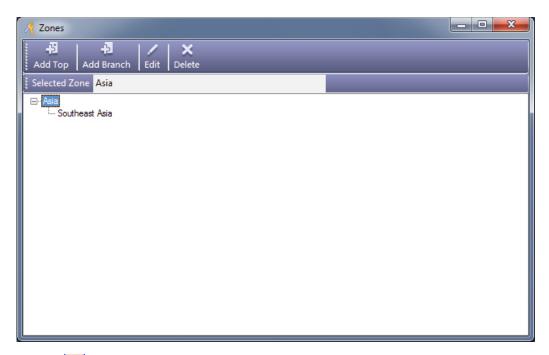

Click , Click (Configuration) > (Controllers) > (New).

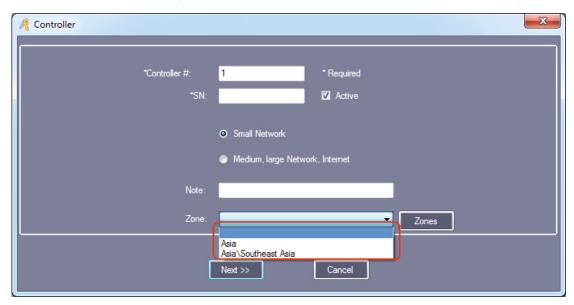

1.3 Operation of Department and Registered User

1.3.1 Add Department

Click 【Configuration】 > 【Department】 from the menu bar

% Secnor



click the Add Top to create a new department.



Click "OK"



Click the Add Branch to add a new Branch under the Top.



Click "OK"






1.3.2 Add and Edit a User

Click 【Configuration】 > 【Personnel】 from the menu bar



Click "Add" to add users.

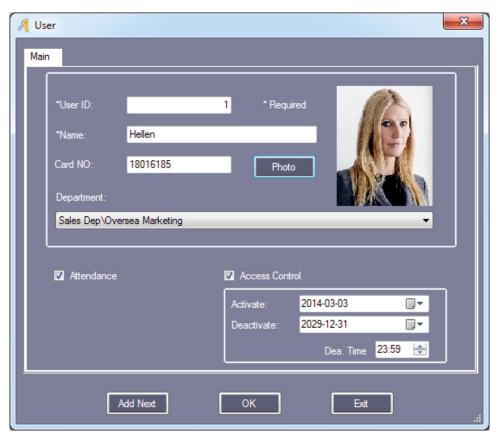



Remark: "User No." and "Name" must be entered.


After entering all information of the user, click this button Add Next, once completed adding a user to the system, meanwhile it will show the user windows and wait to add the next user's information.

Add photo, please consult the Appendix 5.1 How to display user's photo at Monitor.

Click "OK", This user has been added to the System.



User "Others" information

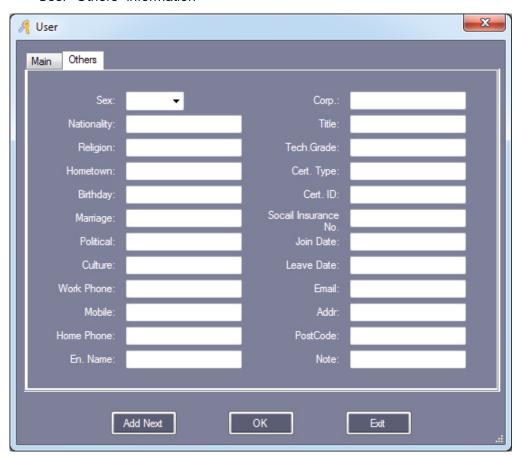




1.3.3 Auto Add the registration card

Click [Configuration] > [Personnel] > [Auto Add]




If you selected "USB Reader", you must connect the USB card reader (The model # for wiegand product is WG1028) with the computer.

Click "USB Reader" or "Controller", Click "Next"

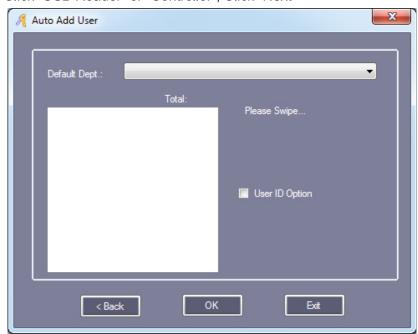


After swiping



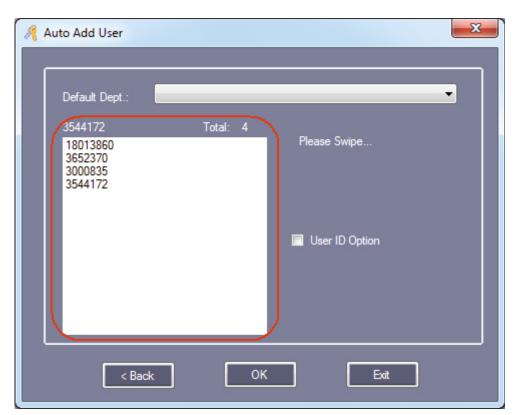


Click "OK", Auto added to the Software.

Click "Manual Batch Input", Click "Next"

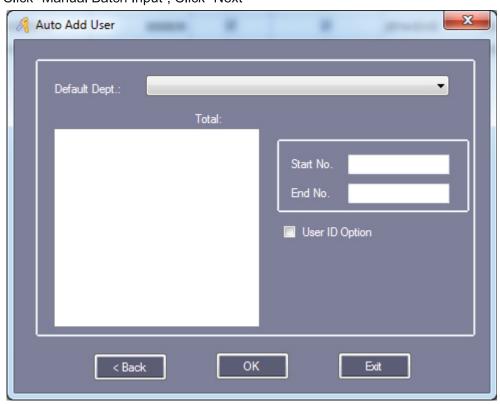


Manual Input "Start NO." and "End NO."



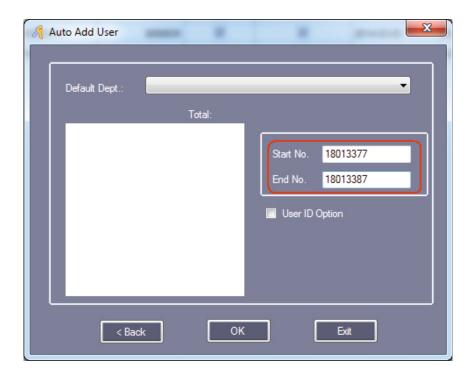

Click "OK", All users card auto added to the Software.

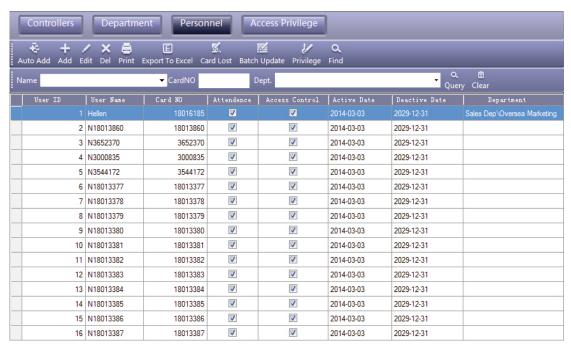

Attention: While Auto Adding users, the default name will be "N + Card Number"

Alter

1.3.4 Single-user's Privilege


Please consult the chapter 2.4.1.2 Edit One User's Privilege



1.3.5 Card Lost


If someone has lost his card, he must register the lost card, and then redistributes a new card to him. The steps as follows:

Click [Configuration] > [Personnel] > [Card Lost]

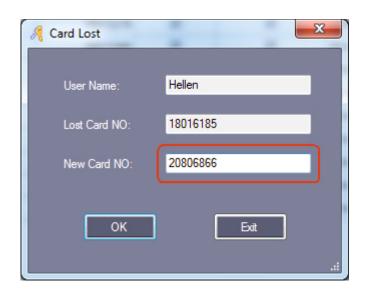

Input "New Card ID" :20806866 Click "OK"

If the communication breaks while uploading the data, the system will show the following error message

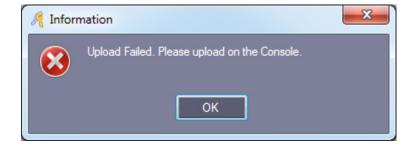



1.4 Operation


1.4.1 Privilege Management

1.4.1.1 Access Privilege

Click 【Configuration】 > 【Access Privilege】 from the menu bar or shortcut.





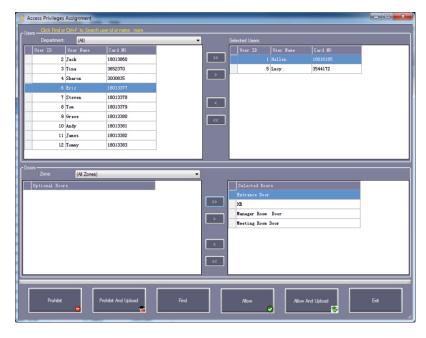

[&]quot;>>" Select all "Users" or all "Optional Doors"

[&]quot;>" Select one "Users" or one "Optional Doors".



"<": Cancel one "Selected Users" or one "Selected Doors".

"<<": Cancel all "Selected Users" or all "Selected Doors".

After clicking this button, and then **Operation -> Upload**, the selected users can pass through the selected doors.


Allow And Upload

After clicking this button, the data will be uploaded & users can pass through the selected doors.

if the details uploaded (Operation -> Upload) after pressing this button, and then, the selected users cannot pass through the selected doors.

Prohibit And Upload

After clicking this button, the selected userscannot pass through

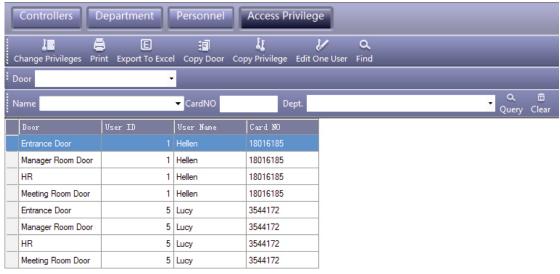


After adding all privileges into the system, it should be uploaded(Operation << Upload) otherwise it will not work, please consult (Chapter 2.5.2 Upload Setting).

the selected doors.



1.4.1.2 Edit One User's Privilege

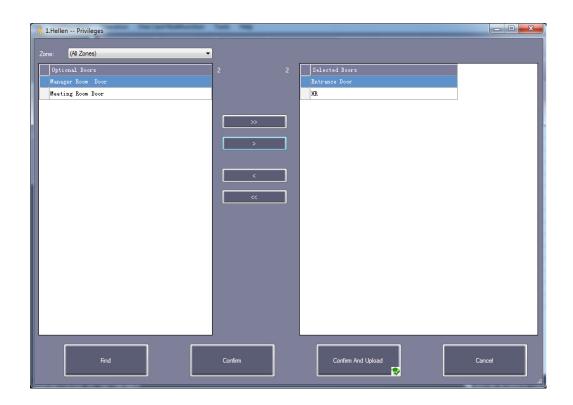

- ">>": Select all "Optional Doors"
- ">": Select one "Optional Doors"
- "<": Cancel one "Selected Doors"
- "<<": Cancel all "Selected Doors"



Click this button after adding or removing doors

1.5 Console

Click【Operation】>【Console】 from the menu bar. The console window contains many basic operations. For example, "Monitor", "Check", "Adjust Time", "Upload",


" Download" and "Download and Monitor".






1.5.1 Controller's Info Check

Click [Operation] > [Console] > [Check] from the menu bar.

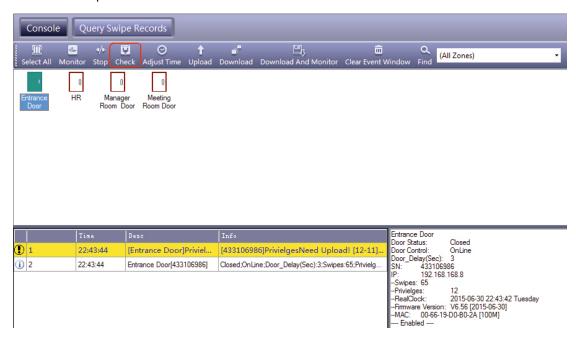


It will show the controller's basic information. such as the number of swipes and privileges, Door status, control status, open delay (sec) etc. If the controller is connected with computer, the door label's color will be green, otherwise the color will be red.

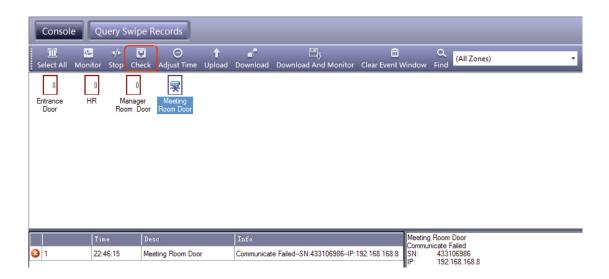




1.5.2 Upload Setting

Click 【Operation】 > 【Console】 > 【Upload】 from the menu bar.

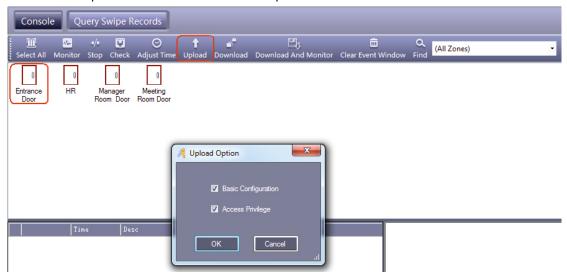

Click "OK"

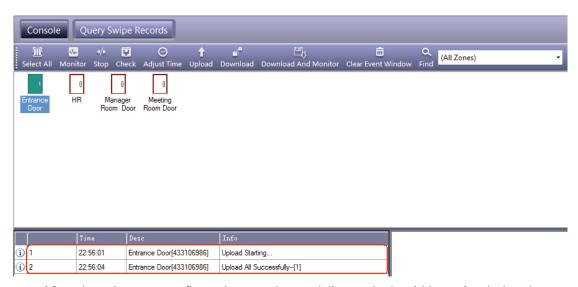


After changing any configurations such as privileges, it should be uploaded to the controller.




1.5.3 Monitor

Click [Operation] > [Console] > [Monitor] from the menu bar

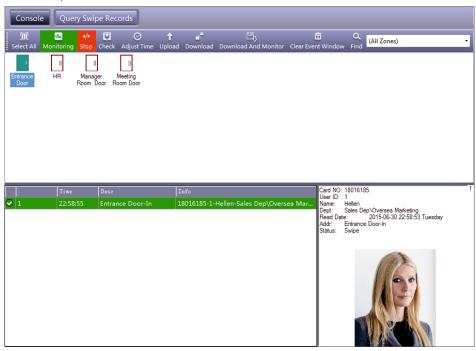


1.5.4 Display More Swipes

Only display swipe card records.

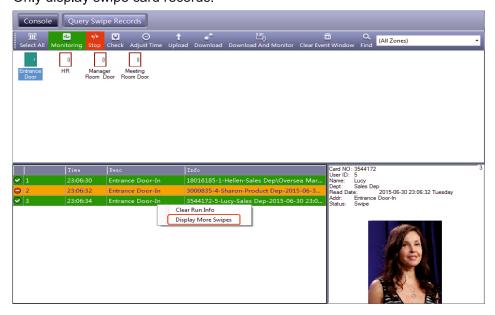






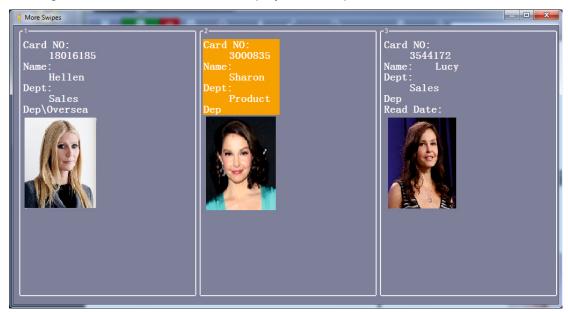


Right click "Photo". You can adjust the display of information.

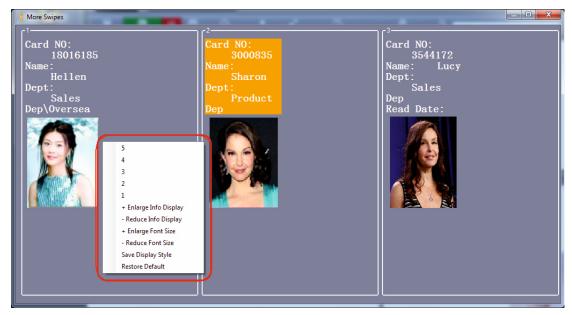



1.5.5 Getting Swipe Records


Click [Operation] > [Console] > [Download] from the menu bar .

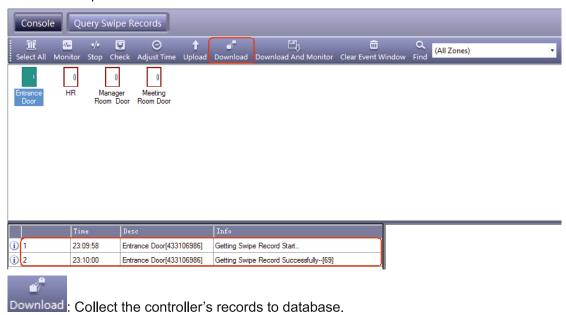

1.6 Records Query


Please "Download" Records and then query.

Click 【Operation】 > 【Query Swipe Records】 from the menu bar

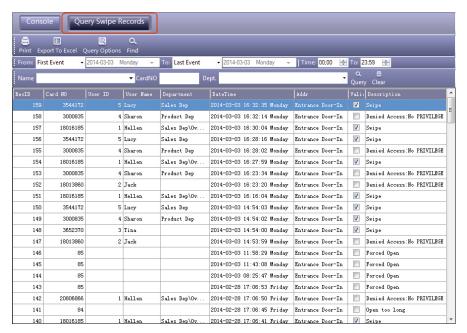






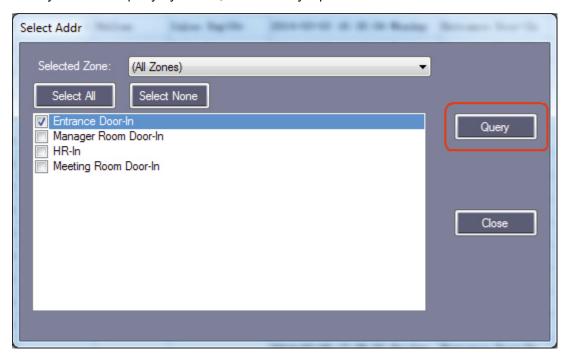

Query result as follows:

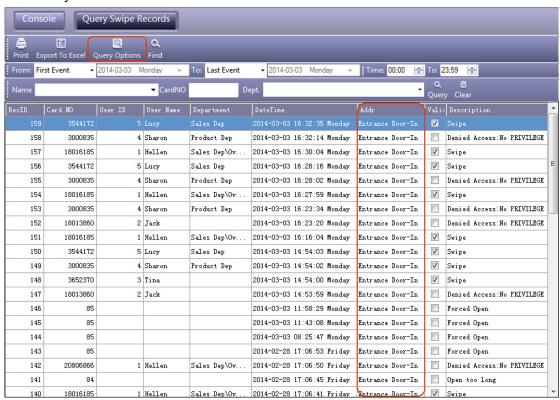



1.7 Tools

1.7.1 Change Password

Change operator and operator's password.

Click Tools > [Edit Operator]




Modify operator Name, input the new name in "Name".

Input "New Password" and "Confirm Password" must be the same, After the modify current password, Re-login to take effect.

DB Backup

1.7.2

Click [File] > [DB Backup]

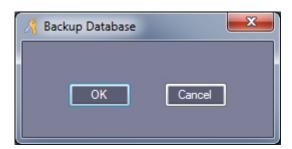


Click "OK".

This backup file is saved in software under the default installation path.



If Backup is SQL DB.

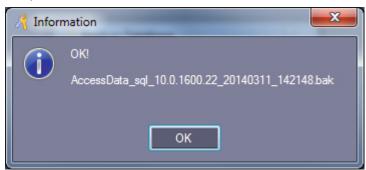

Click "OK", This backup file is saved in database under the default installation path. "C:\Program Files\Microsoft SQL Server\MSSQL10.MSSQLSERVER\MSSQL\Backup"

1.7.3 Option



[Language]

Click Tools > Language from menu bar.





【Interface Title】

Click Tools > Interface Setting from menu bar.



【House】: Used in community management.

【Show Getting Started When Login】: To guide the operation software.

【Auto Login】

Click 【Tools 】 > 【Auto Login】 from menu bar.




【Auto Login 】: Select "Auto Login", In "Login" windows, you don't need to input "User Name" and "Password".



Part 2 Extended Function

Click Tools > Extended Functions from the menu bar

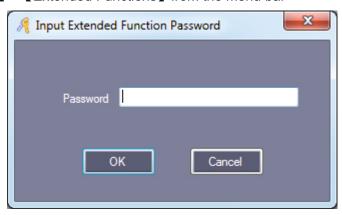

If you want to Activate the Extended Function. please input the password.


Active the Extended Functions, must Re-Login the software.



Extended Functions introduced as follows:




2.1 File

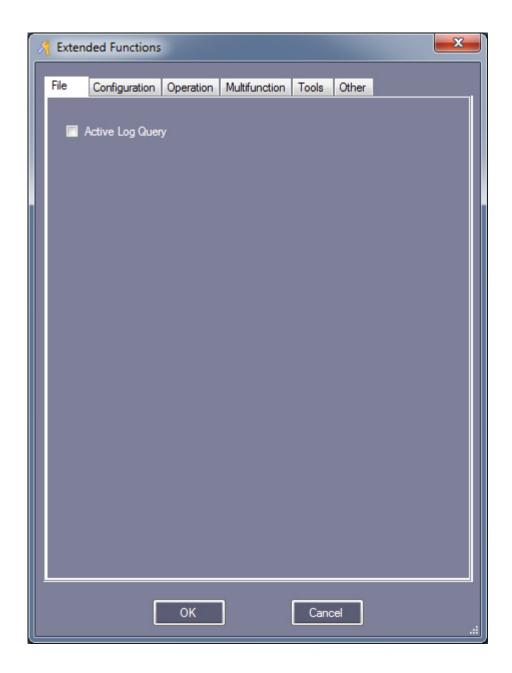

2.1.1 Active Log Query


Click [File] > [Log Query]



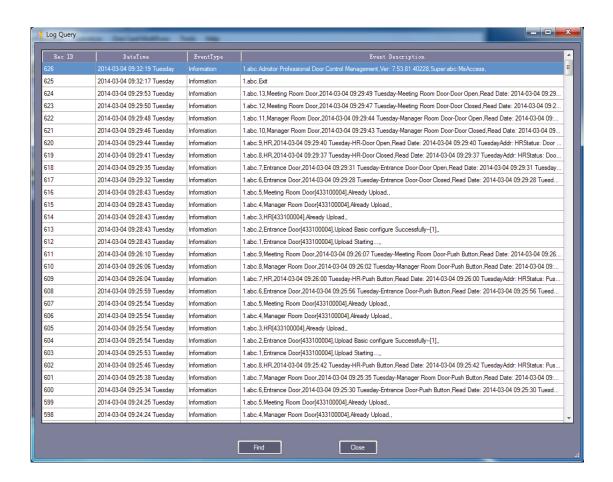




2.2 Configuration

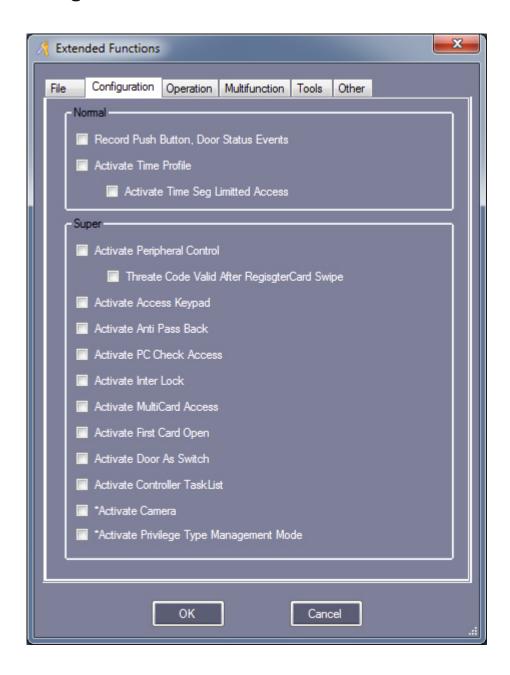

2.2.1 Record Push Button Events


Record each time the button operation, active this function, you must upload on the console.



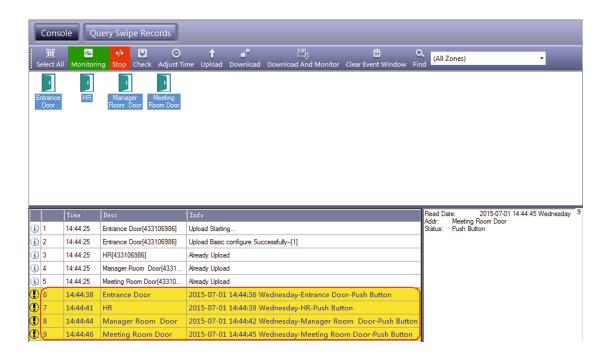

2.2.2 Record Door Status Events

Record "Door Open" and "Door Closed" time. Must connect door sensor. Active this function, you must upload on the console.

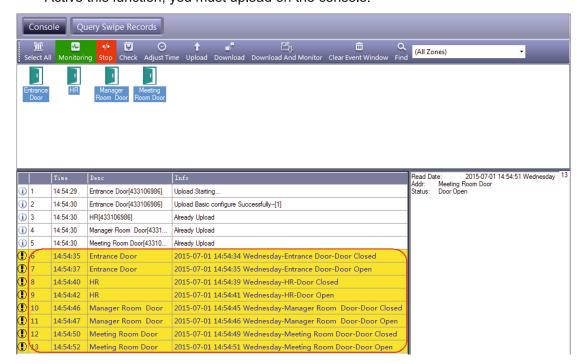




2.2.3 Activate Time Profile

Click [Configuration] > [Time Profile]



Click "New" to add new Time Profile and setting.

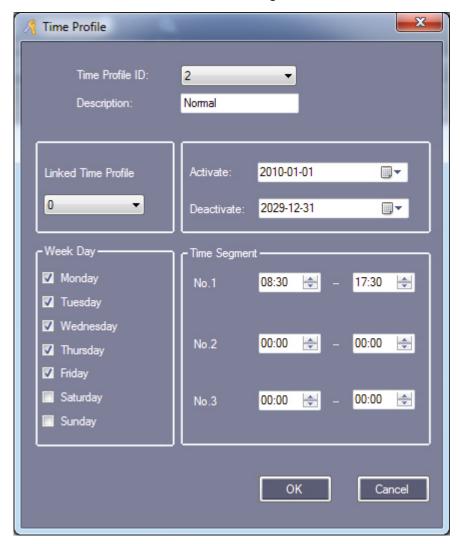

Click "OK"






If you assign the user card "Normal", authority that work from Monday to Friday at 08:30-17:30, it has permissions to get in or out during this time range.

If you need to work on Saturday, First write 3 in "Time Profile ID", Then the "Time Profile ID" 2 linked "Time Profile ID"3.

Add new "Time Profile 3"

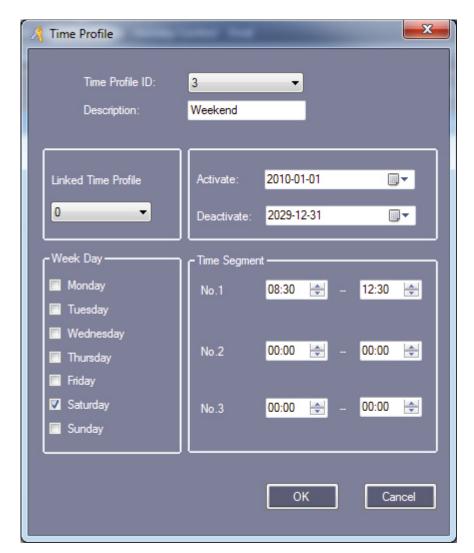


Click "OK"






"Time Profile 2" link "Time Profile 3"

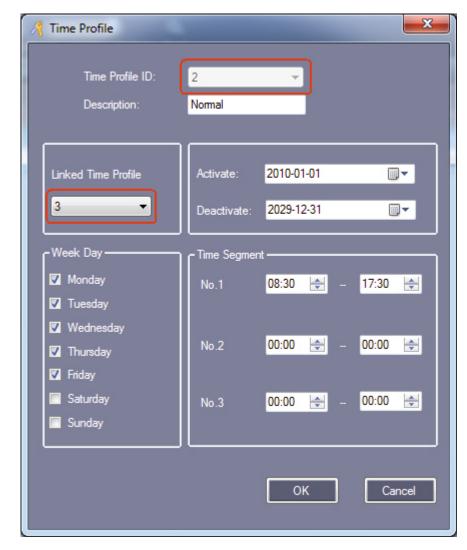

After setting "Time Profile", you need to assign permissions to the corresponding user in the Access Privilege ,and then the users can pass in and out at the specified "Time Profile".

Click [Configuration] > [Access Privilege] > [Change Privileges]



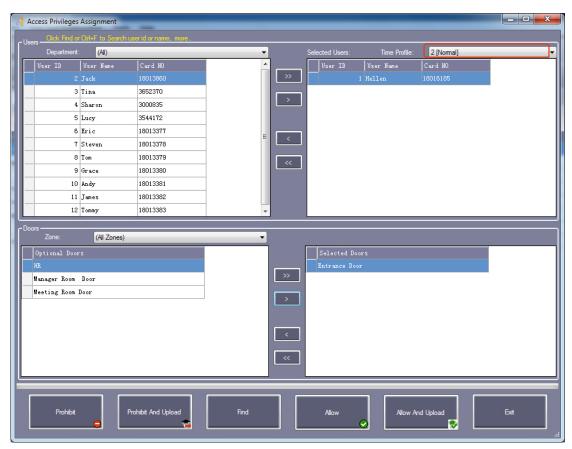


After setting privilege, please select [Operation] > [Console] > [Upload]

2.2.4 Activate Peripheral Control

Click 【Configuration】 > 【Peripheral】



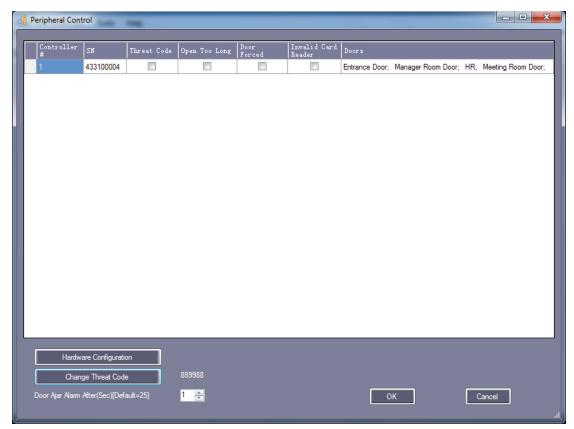


"Threat Code": Must be used with the PIN keyboard Card Reader.

"Thrust In": Must be connect with door sensor.

【Hardware Configuration】



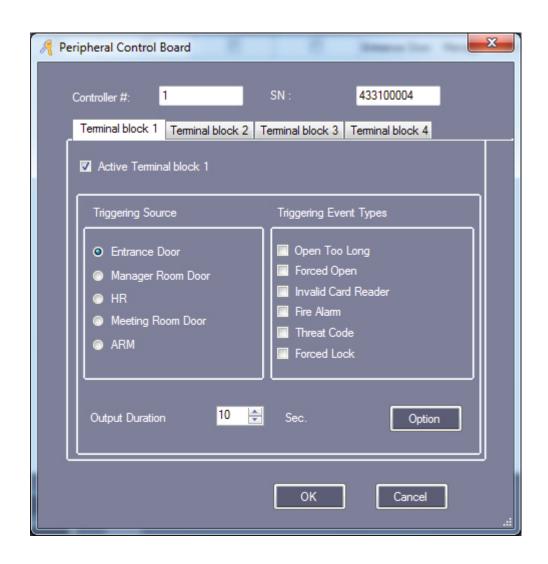


2.2.5 Activate Access Keypad

Click 【Configuration】 > 【Pwd MGT】


【Card + PIN】



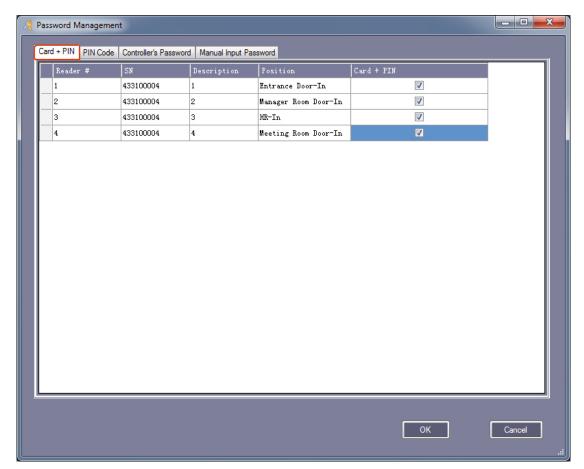

【PIN Code】




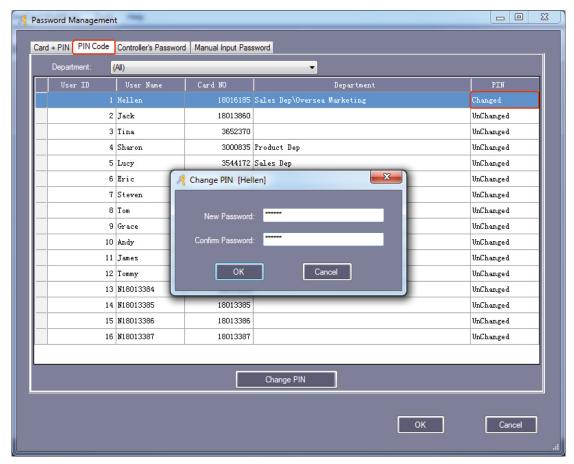

User's default password is 345678.


【Controller's Password】



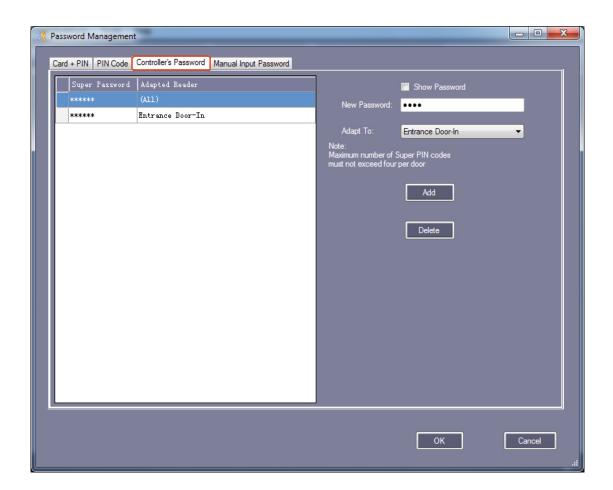

[Manual Input Password]




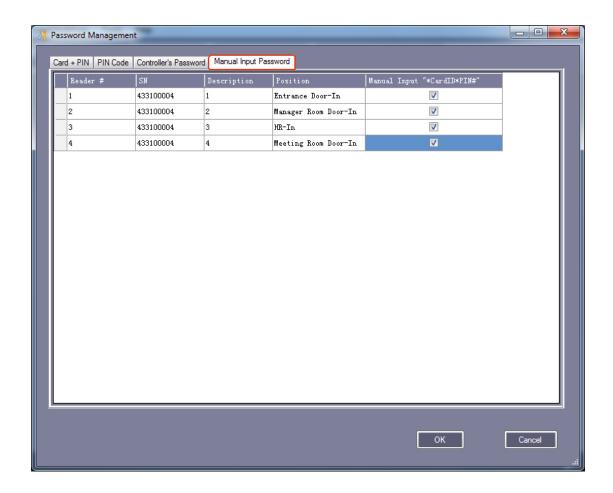

2.2.6 Activate Anti Pass Back

Click 【Configuration】 > 【Anti-pass back】




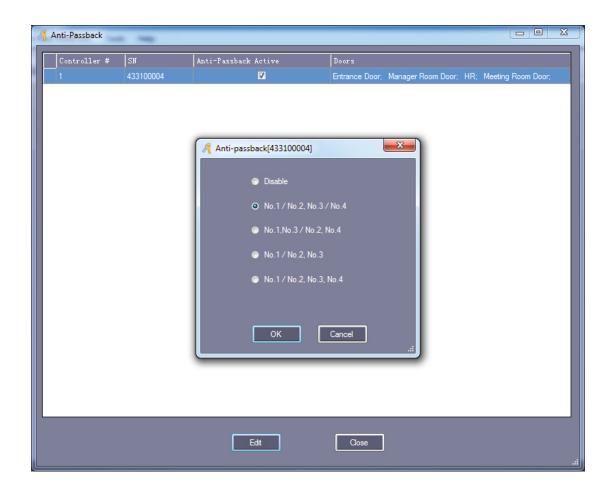

2.2.7 Activate Inter Lock

Click 【Configuration】 > 【Interlock】




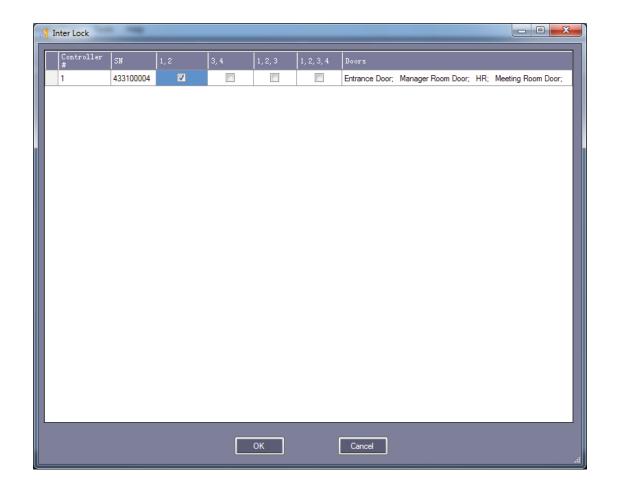

2.2.8 Activate Multi Card Access

Click 【Configuration】 > 【Multi-card】



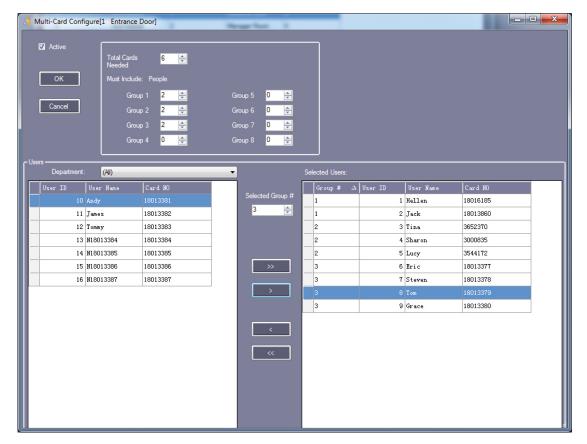


The first group has two persons, the second group has two persons, and the third group has two persons. Need to swipe all cards in a particular group to open the door.

2.2.9 Activate First Card Open

Click 【Configuration】 > 【First Card】




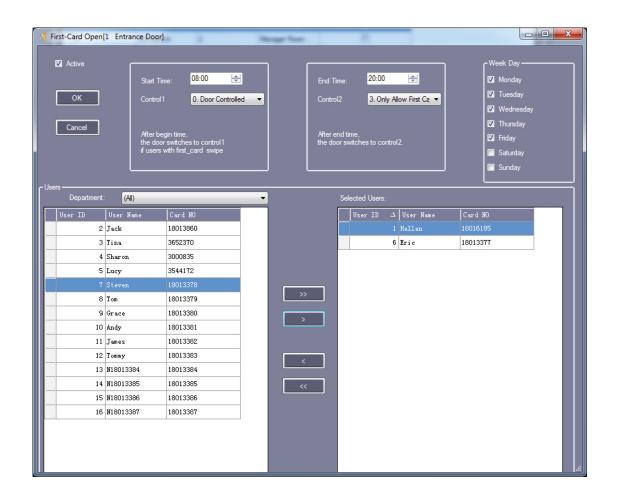

2.2.10 Activate Controller Task List


Click 【Configuration】 > 【Task List】



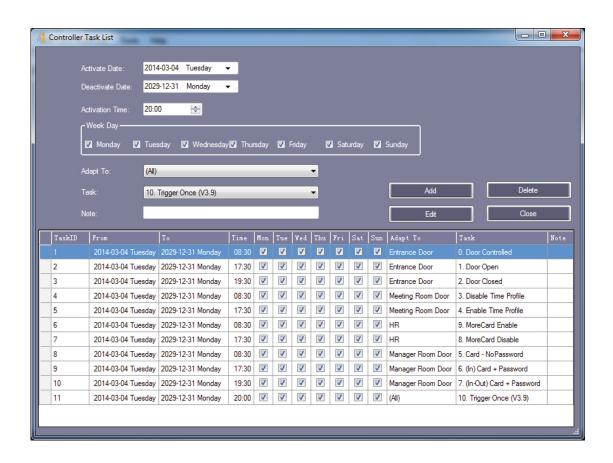



2.3 Operation

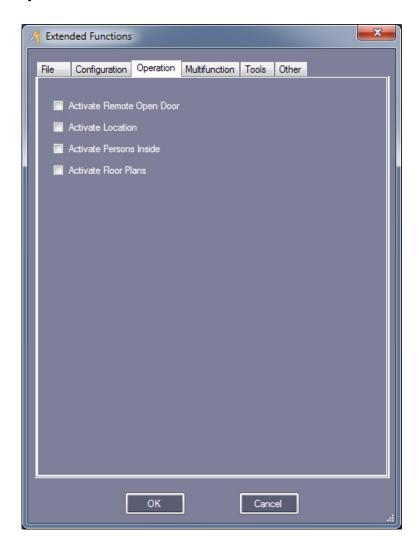


2.2.8 Activate Remote Open Door

Click [Operation] > [Console]




First selected "Entrance Door", Then click "Remote Open".



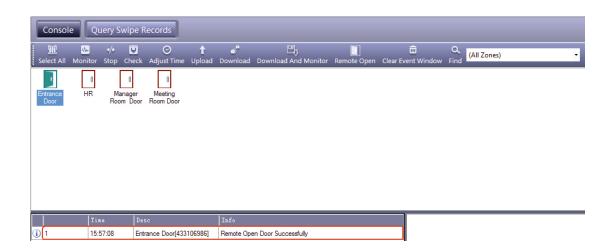

2.4 Multifunction

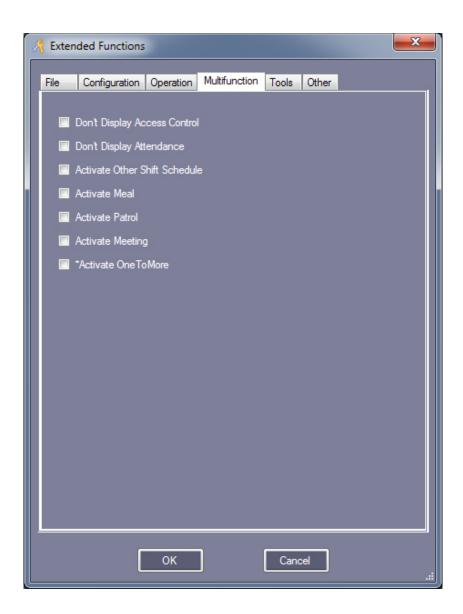




2.4.1 Activate Meal

Enter the "Extended Function", In front of "Activate Meal" mark this \square with

to active this function.

After Activating this function, Re-login software &Click 【Const Meal】.

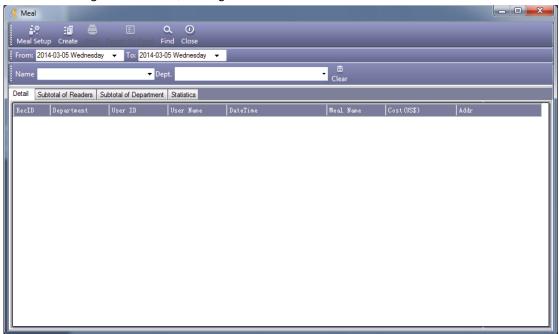


2.4.1.1 Meal Setup

2.4.1.1.1 Readers

Click "Meal Setup", At the meal interface, Select "Readers". Eg: Set "Dinging Room 1" and "Dining Room 2" is a dining point.




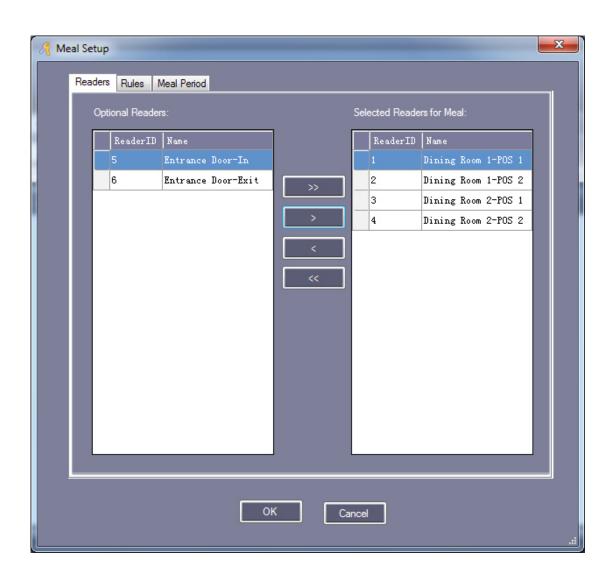

2.4.1.1.2 Rules

Click "Meal Setup", At the meal interface, Select "Rules".




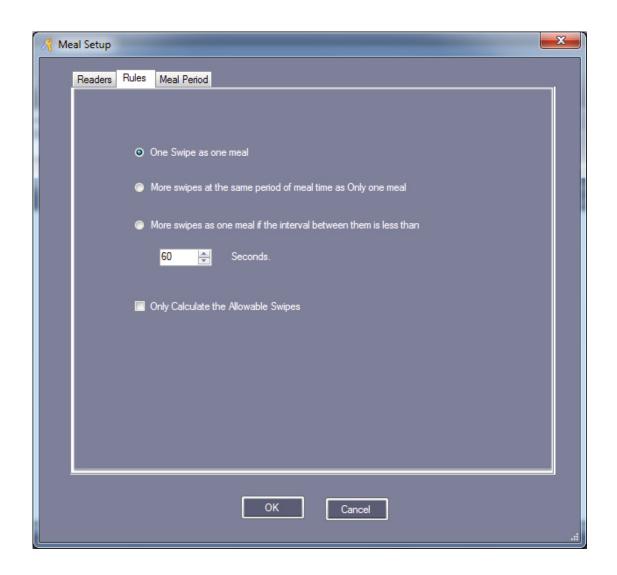

2.4.1.1.3 Meal Period

Click "Meal Setup", At the meal interface, Select "Meal Period".




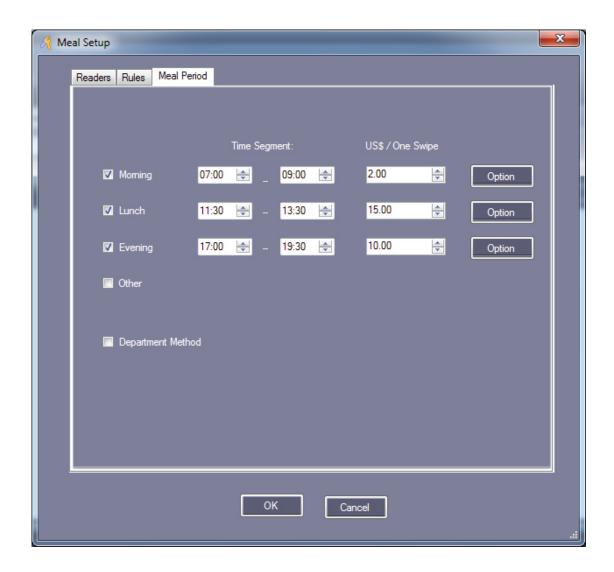

Click "Option", Set a fixed amount of consumption.

If you want to set a fixed amount of consumption, click "Option" to finish the settings.




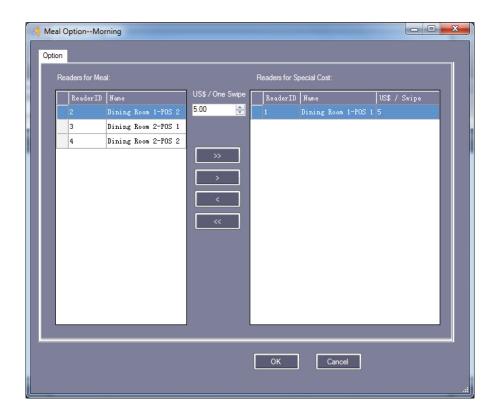

2.4.1.2 Meal Report

2.4.1.2.1 Meal Details Report


Click "Create", At the meal interface, Display the details of the staff dining at which POS machine.

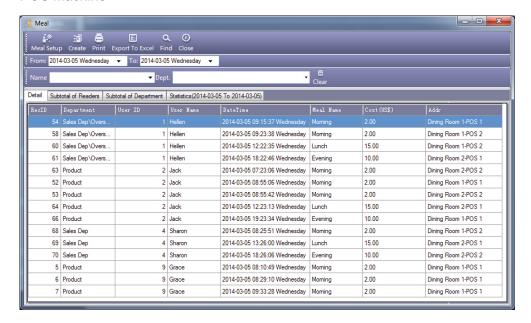




2.4.1.2.2 Meal Stat. report of Readers for Meal

Click "Create", At the meal interface, select "Subtotal of Readers", Display all dining times and total money at each dining point.

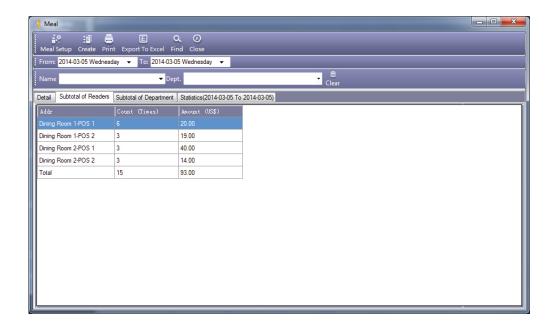

2.4.1.2.3 Meal Stat. report of Subtotal of Department


Click "Create", At the meal interface, select "Subtotal of Department", Display all dining department and total money.

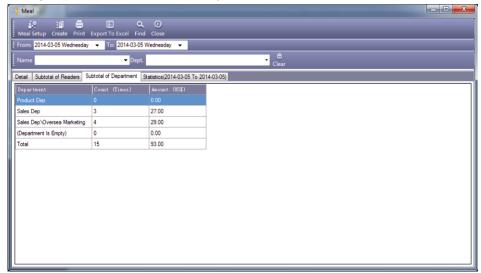



2.4.1.2.4 Meal Stat. report of Users


Click "Create", At the meal interface, select "Statistics", Statistics of each employee dining times and total money.

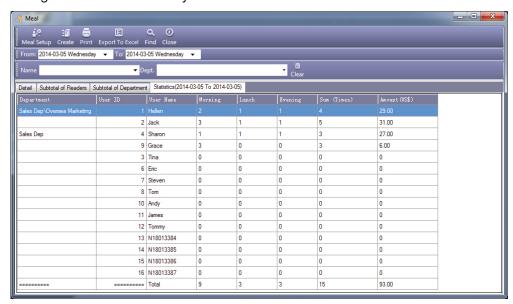

2.4.2 Activate Patrol

Enter the "Extended Function", In front of "Activate Meal" mark this ☐ with to active this function.

After Active this function, Re-login software. Click 【Patrol】.

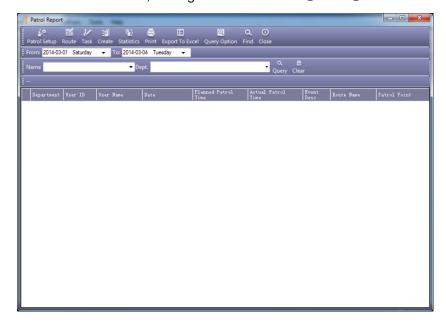




2.4.2.1 Patrol Setup

2.4.2.1.1 Patrol Point

Click "Patrol Setup", At the patrol interface.


Eg: Set "Entrance Door" is a Patrol Point.

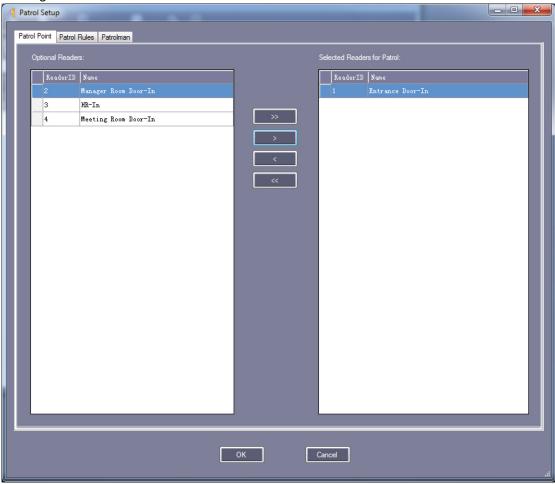

2.4.2.1.2 Patrol Rules


Click "Patrol Setup", At the patrol interface, select "Patrol Rules" and set recording to your actually rules.



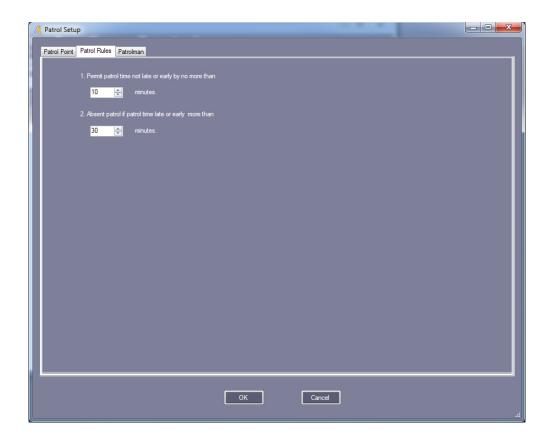

2.4.2.1.3 Patrolman


Click "Patrol Setup", At the patrol interface, Select "Patrolman". Eg: Set "Tom" is a Patrolman.

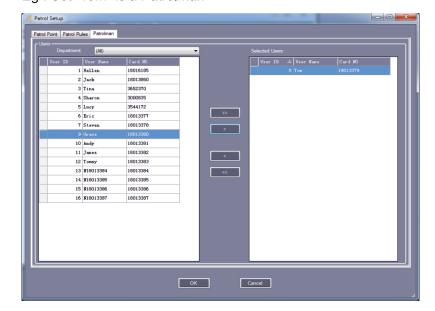




2.4.2.2 Patrol Route

Click "Route", At the patrol interface.

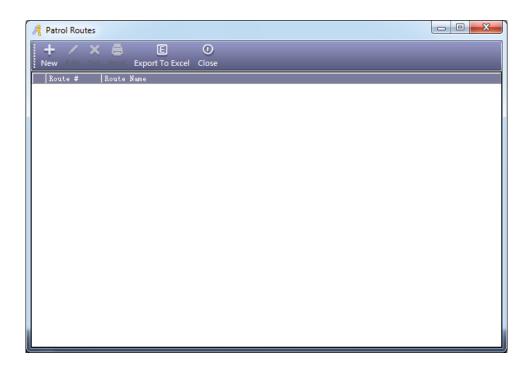

Click "New", Add the Patrol Route.

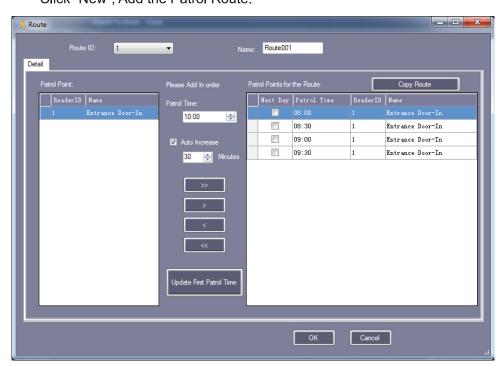




2.4.2.3 Patrol Task

Click "Task", At the patrol interface.


Eg: Set Tom's patrol route

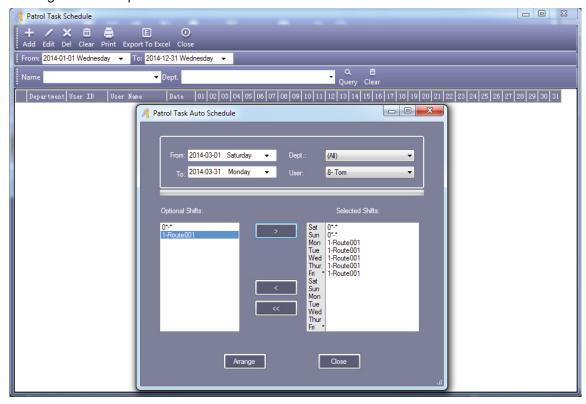


2.4.2.4 Patrol Report

Please Get Records Before Creating Report. Click "Create", At the Patrol interface,



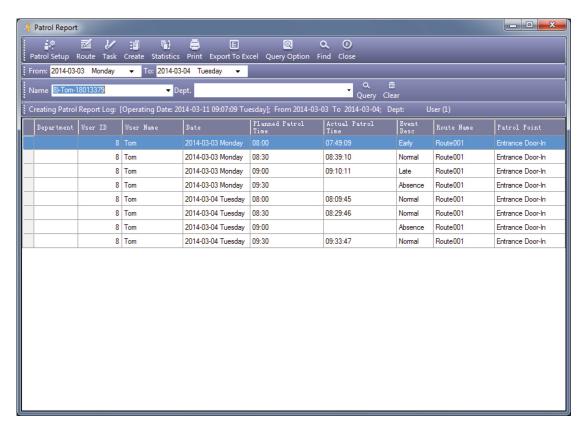


Click "Query Option", Query "Event Desc".

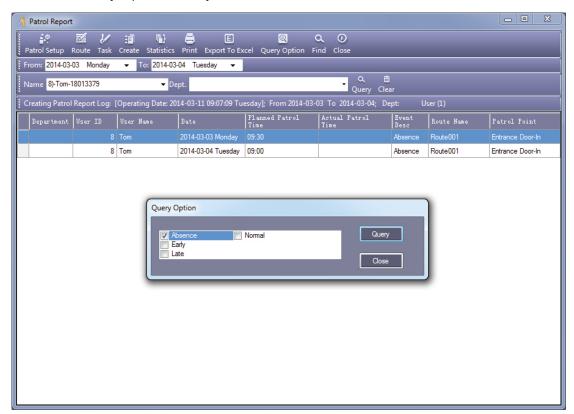



2.4.2.5 Patrol Statistics

Click "Statistics", At the Patrol interface. Statistics Patrolman of the Event Desc.

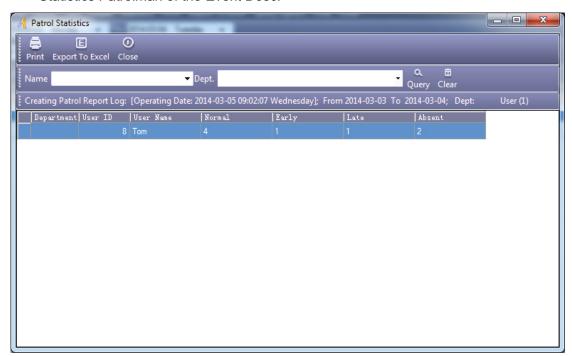


2.4.3 Activate Meeting

Enter "Extended Function", In front of "Activate Meeting" mark this ☐ with vo active this function.

After Active this function, Re-login software. Click [Meeting Sign].




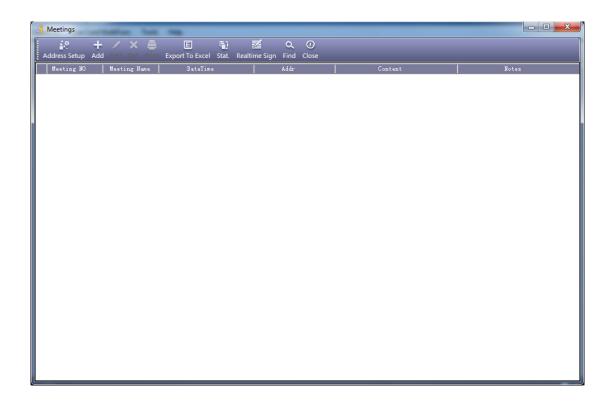

2.4.3.1 Address Setup


Click "Address Setup", Enter into the Address Setup interface.



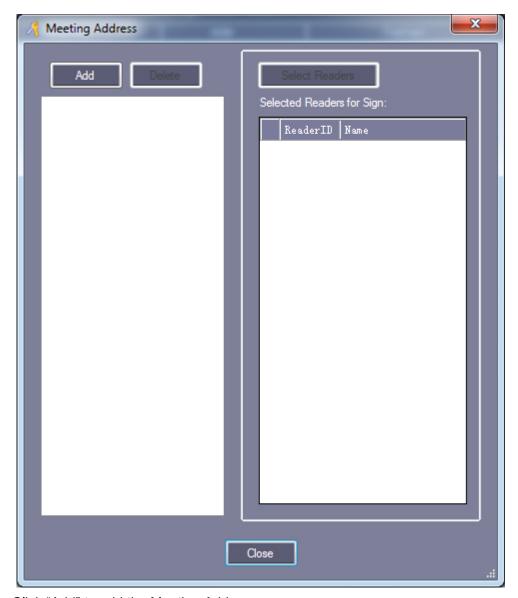

Click "Add" to add the Meeting Address.



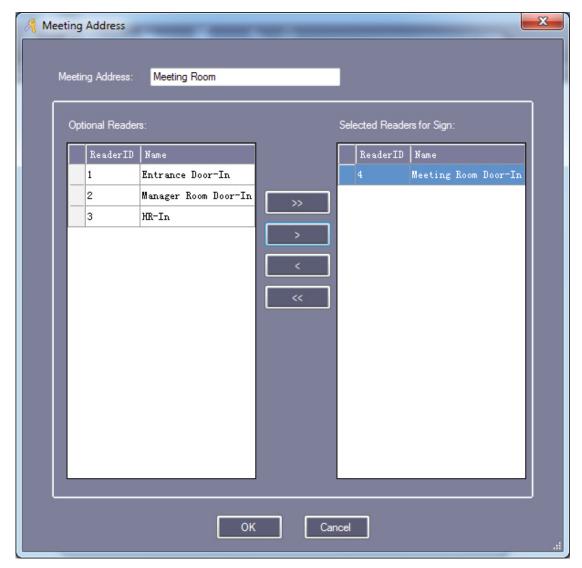


You must input a "Name" at the "Meeting Address."

2.4.3.2 Add Meeting

Click "Add", At the meeting interface. Eg: Add "Weekly Meeting".



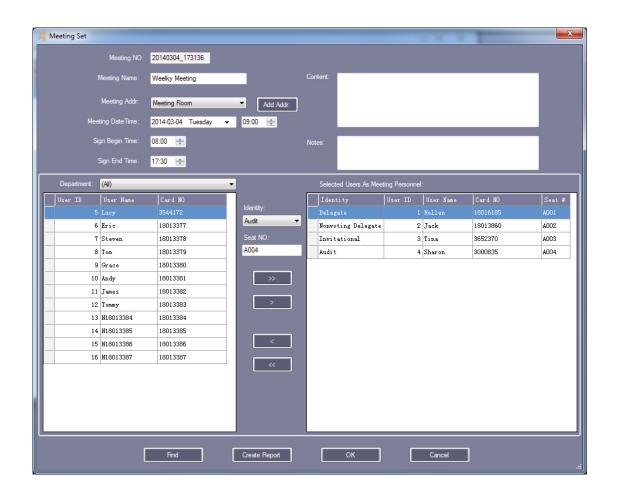


 $\hfill I dentity \hfill I : Have "Delegate" <math display="inline">\hfill$ "Nonvoting Delegate" \hfill "Invitational" \hfill "Audit" \hfill "Employee" \hfill "Other"

Modify the meeting, click "Edit", At the meeting interface. Delete meeting, click "Delete", At the meeting interface.



2.4.3.3 Meeting Stat

Click "Stat", Detailed statistical a single meeting attendance. Can statistical "Should" 、"In Fact" 、"Leave" 、"Absent" 、"Late" 、"Total statistical" and "Calculate participants rate".

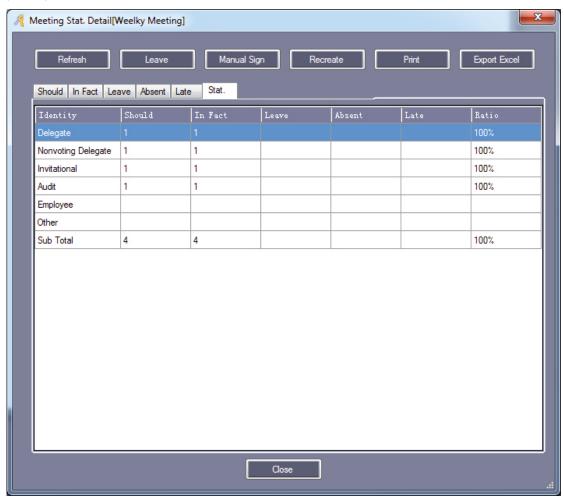

2.4.3.4 Realtime Sign

Click "Real -time Sign", Real -time attendance of the meeting.






2.4.4 Activate One to More

Into the "Extended Function", In front of "Activate One To More" mark this ☐ with to active this function.

2.4.4.1 Add One to More Controller


Click 【Configuration】 > 【Controllers】, Click "New".



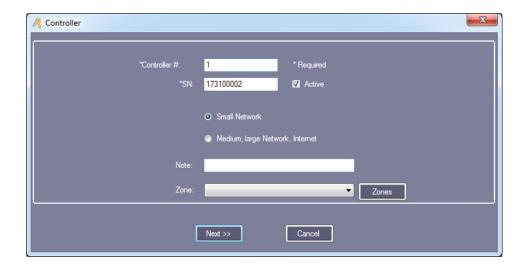


The details please reference chapter 2.2 Parameter Settings of Equipment.

Click "Next".

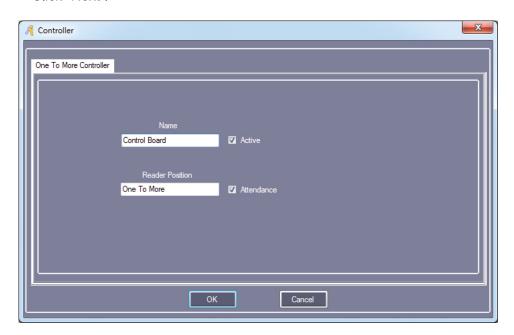


Click OK".

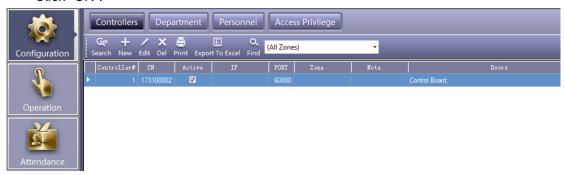



2.4.4.2 One to More Management


Click 【One to More】.

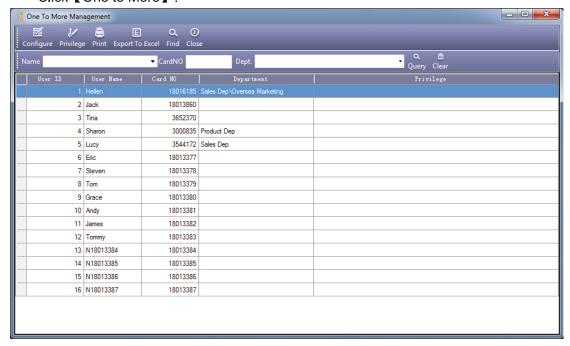

2.4.4.2.1 Door Management

Click Configure", Enter into the door management interface.



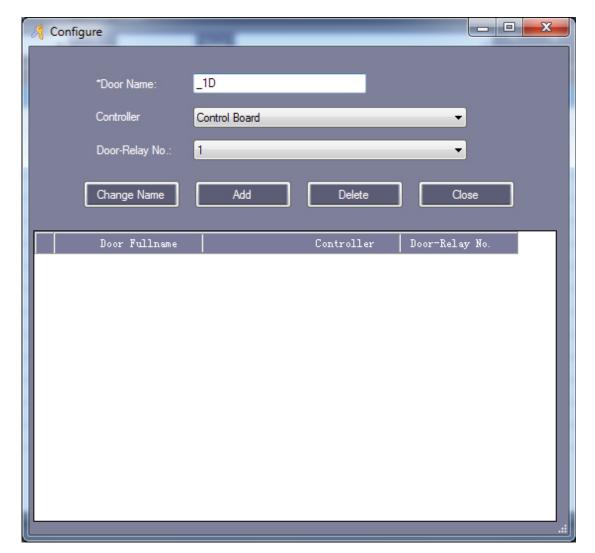


Door Name: Click can be modified. Default value is "_1 D" and the corresponding Floor-Relay NO."1"

【Add Door】

Fill in "Door Name", select "Controller" and "Door-Relay NO", Click "Add". If you do not need to re-fill, click "Add".




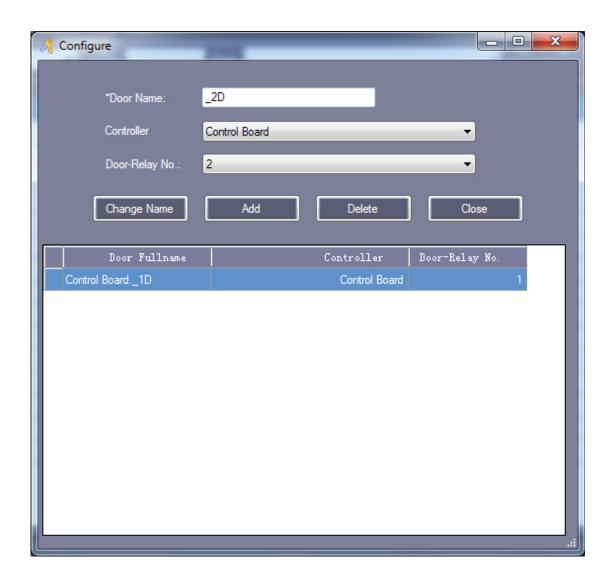


2.4.4.2.2 Set user up to door

Fist selected user, then click "Privilege". Example: Set "Hellen" up to "1 Door".



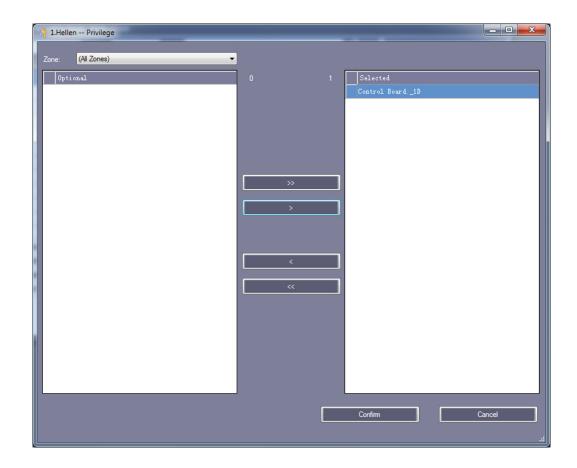


Click "Confirm", Back to "Console" click "Upload". Then Swiping Card, "Hellen" will be enter into 1 door.

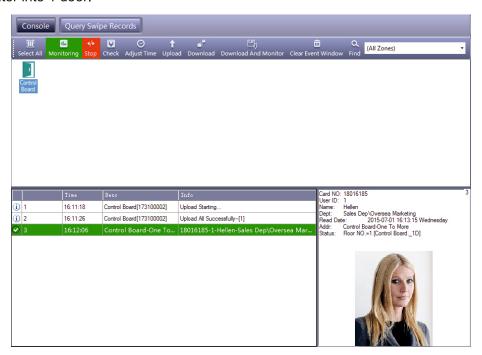




2.5 Tools

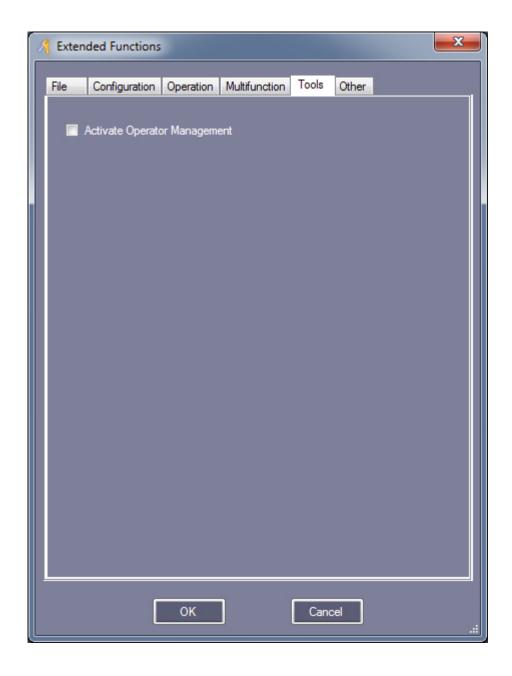

2.5.1 Activate Operator Management

Click 【Tools 】 > 【Operator Management】



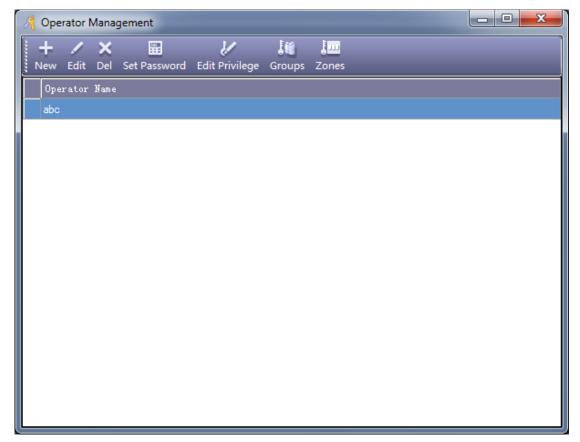

You can use the "New", "Edit", "Del", "Edit Privilege", "Groups" and "Zones" for the operator.


Edit Privilege: assign the executive operation and function privilege to operators.

Attention: "abc" is the default high-level Administrators, cannot "Del" and "Edit Privilege".



Part 3 Attendance


The Access Control System has activated the Attendance by default. If you want to cancel this function, please select [Extended Functions] > [One Card Multifunction] > [Don't Display Attendance]

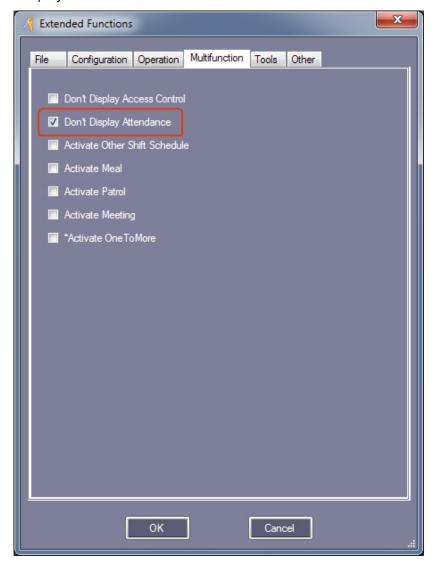

3.1 Normal Shift Rules

Click [Attendance] > [Normal Shift Rules]




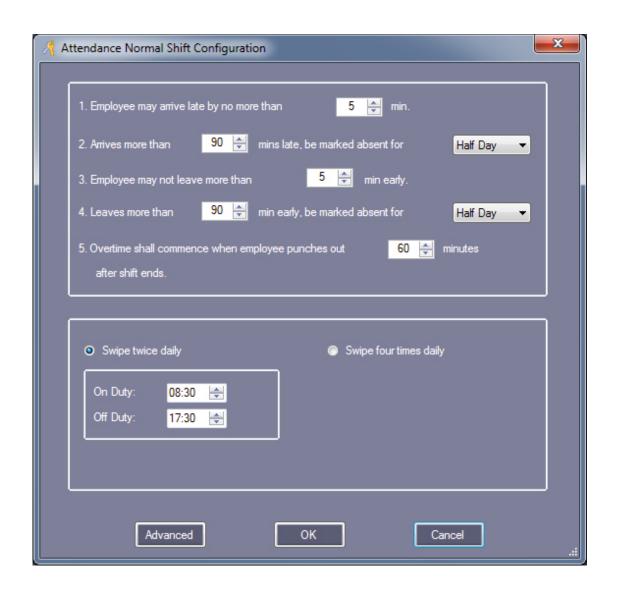

3.2 Holiday

Click [Attendance] > [Holiday]



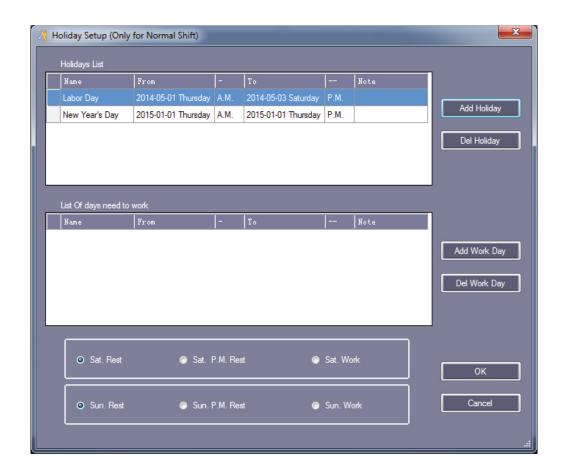

3.3 Leave/Business Trip


Click 【Attendance】 > 【Leave/Business Trip】





3.4 Manual Sign In


Click [Attendance] > [Manual Sign In]

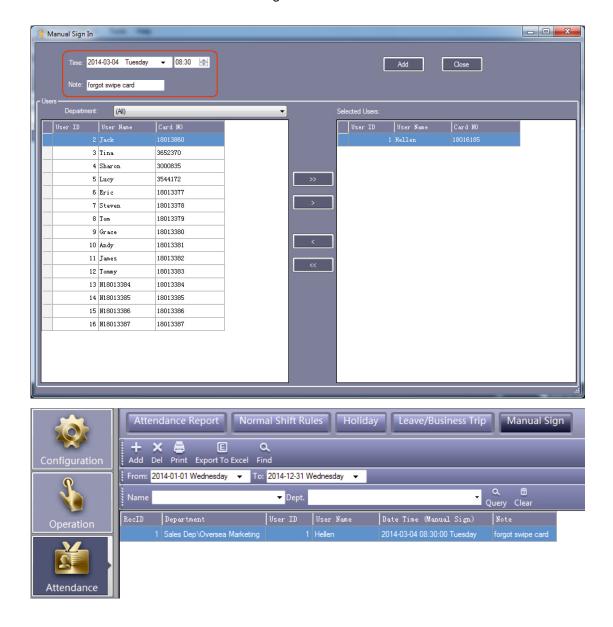


3.5 Attendance Report

Click [Attendance] > [Attendance Report]



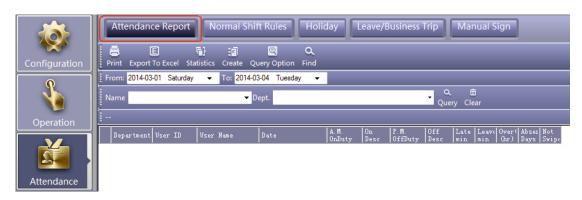


Click "Create"

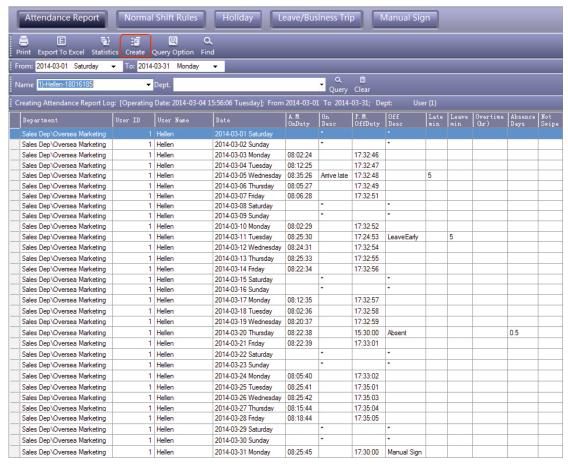

Click "Statistics"



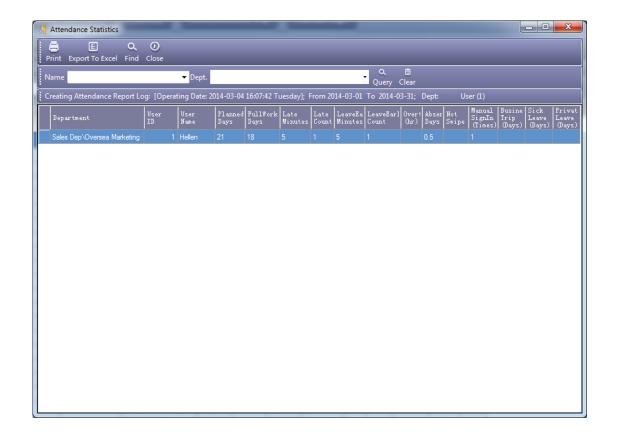




Part 4 Appendix


4.1 How to display user's photo when Monitoring

If you want to add user's photo when adding the user, click "Photo" button, and add it.

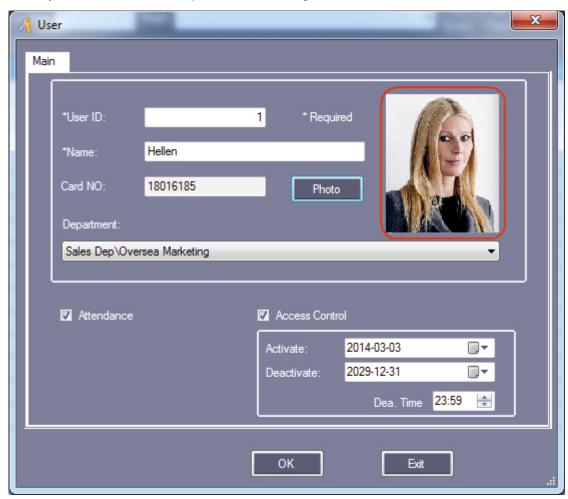

At the monitor window, it can show the user's photo when the user swiping card.




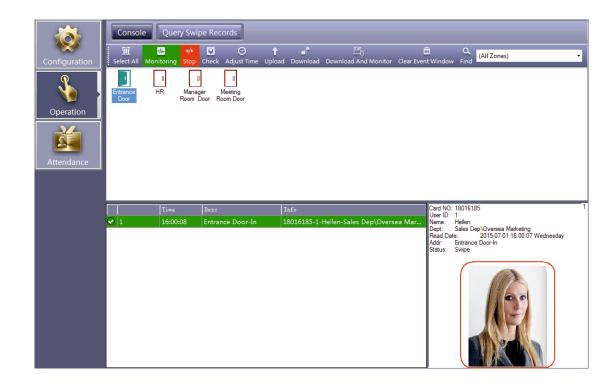

4.2 SQL Server Configuration


Install the SQL Server, and then configure Access Control SQL Server.

Click [Start] > [Programs] > [AccessControl] > [SqlSet]

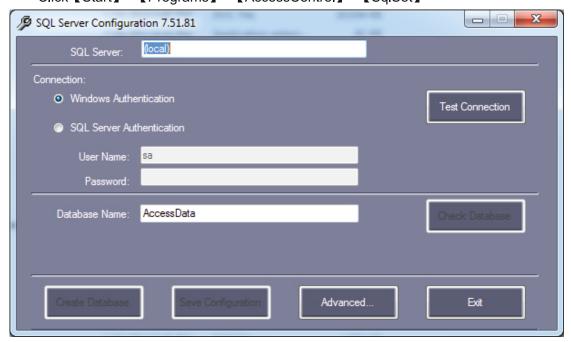

Click "Create Database"




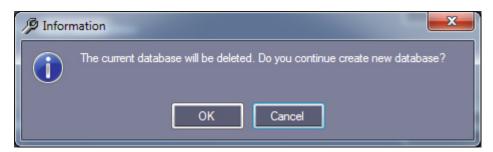


Click "OK"



Click "OK", Then Click "Confirm"

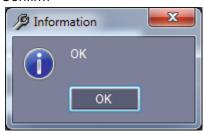


Click "OK", Run Software "Access Control", You can see the created database icon as "SQL: Access Data".

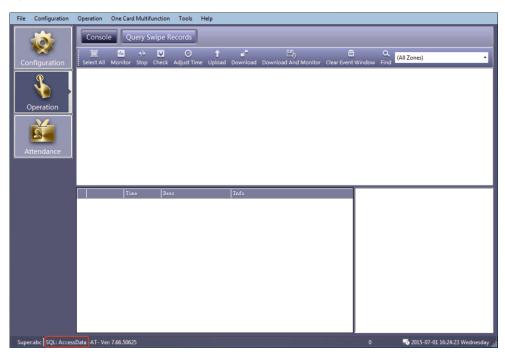




4.3 Import consumer's information from Excel

Attention: It can only import valid "Consumer NO", "Name", "Card ID" and "Department". First "Export to Excel", Open the document, then export the new users information to Excel table.

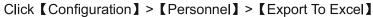

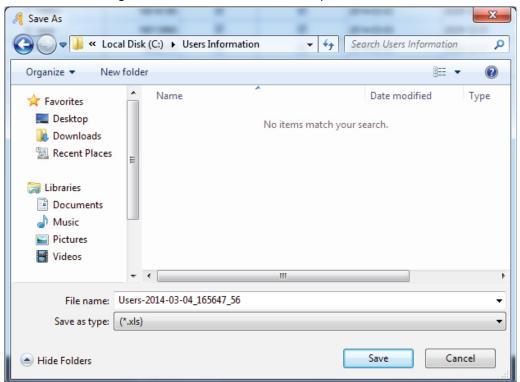


Click "Save"




Open the exported Excel document "Users-2014-03-04_165647_56.xls".



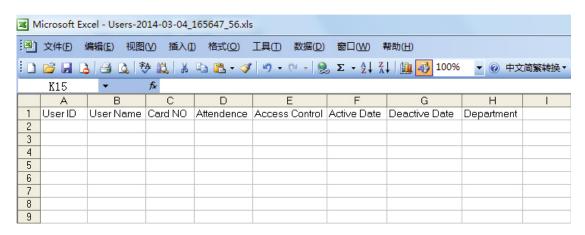

If the document has already users' information, it will delete, and then will create new user's data table.

Example: Just create users "Consumer NO", "Name", "Card ID" and "Department" of the data.

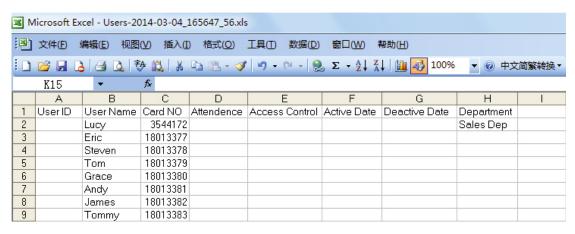

Remark: department can only use "\" as separator. For example: Sales Dep\Oversea Marketing.

After creating user's data, Login software "Access Control", Click [Basic Configure] > [Personnel] Mouse Right Click, Select[Import From Excel] and Click. Select edited Excel document "Users-2014-03-04_165647_56.xls"

Import customer's information from Excel successfully, there will be information prompt



Import Result as:

% Secnor

