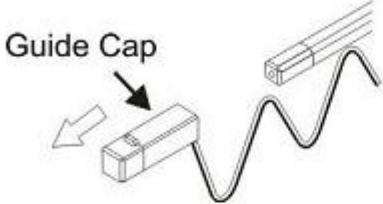
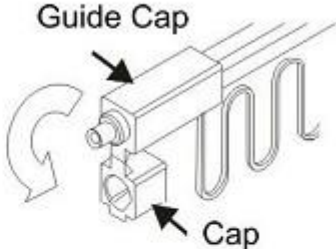
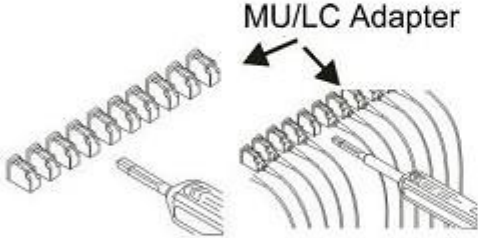
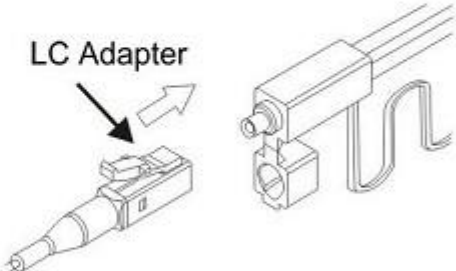

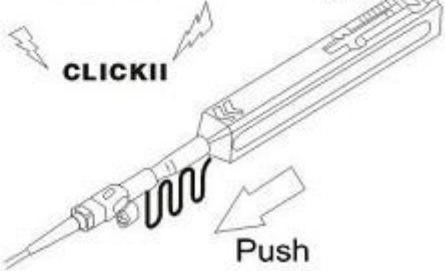


MU/LC Application

<p>1. Remove Guide Cap from the device.</p>  <p>Guide Cap</p>	<p>1. Open the Cover on the Guide Cap.</p>  <p>Guide Cap</p> <p>Cap</p>
<p>2. Insert tip of cleaner into MU Adapter.</p>  <p>MU/LC Adapter</p> <p>Standard</p> <p>Extended</p>	<p>2. Insert connector into the Guide Cap.</p>  <p>LC Adapter</p> <p>Guide Cap</p>
<p>3. Push the Outer Shell to start cleaning A "click" indicates end of cleaning process</p>  <p>CLICK!!</p>	<p>3. Push the Outer Shell to start cleaning A "click" indicates end of cleaning process</p>  <p>CLICK!!</p> <p>Push</p>