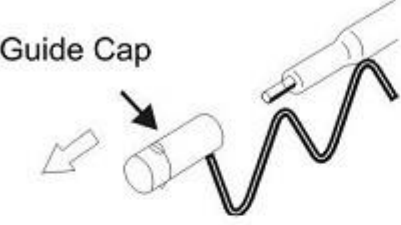
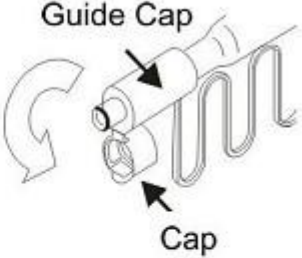
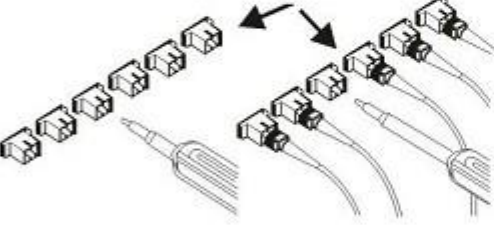
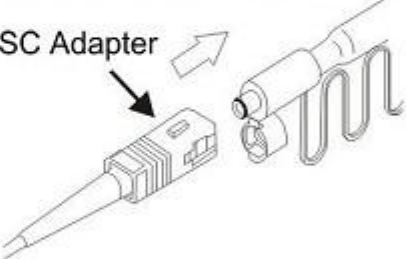
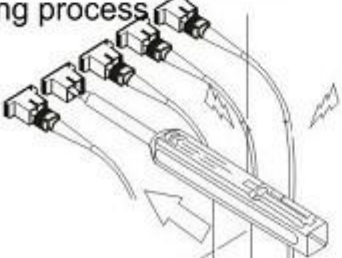
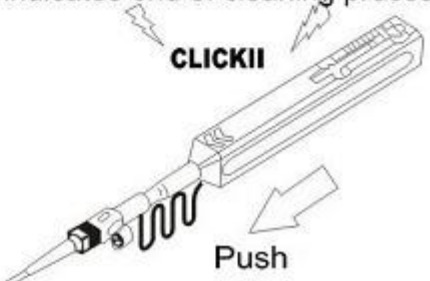


# FC/SC/ST Application

<p>1. Remove Guide Cap from the device.</p>  <p>Guide Cap</p>	<p>1. Open the Cover on the Guide Cap.</p>  <p>Guide Cap</p> <p>Cap</p>
<p>2. Insert tip of cleaner into SC Adapter.</p>  <p>Standard      Extended</p>	<p>2. Insert connector into the Guide Cap.</p>  <p>SC Adapter</p>
<p>3. Push the Outer Shell to start cleaning the SC connector. A "click" indicates end of cleaning process.</p> 	<p>3. Push the Outer Shell to start cleaning the SC connector. A "click" indicates end of cleaning process.</p>  <p>CLICK!</p> <p>Push</p>